

EDP-C2 2021

ELCTRONIC CONTROLLER

EDP CONCEPTION

EDPCONCEPTION.COM

2021 R 1.3

Table of contents

Introduction	page 3
Installation	page 4
Controller properties	page 5
System hook-up diagram	page 7
Programming the parameters	page 8
Replacement fuse	page 11
Generator connections	page 12
Conductor size and fuse notification	page 13
Pulley size	page 14
Belts to use	page 15
Alarm description	page 16
Trouble shooting	page 17
Signal indicators description	page 18
Warranty	page 19
Service instructions	page 21
Security warning	page 22
Parameter	page 23

Introduction

NOTE. TB S MEANS TERMINAL CONNECTOR

- **EDP-C2** consists in a complete electronic concept which allows a greater control of the working parameters resulting in an increase lifespan of the generator and the electromagnet.
- The controller is easy to install. It only needs a few connections.
- The controller adapts to most generators with a range of (180 to 300 volts DC with a maximum of 5 amps on the field).
- The current of electromagnet does not affect the controller.
- The system tolerates $\pm 14\%$ of the generator RPM variation without affecting the efficiency or broke the controller, which is very useful for the system that use hydraulic driven generators.
- The controller's display shows the voltage and the amperage applied to the electromagnet.
- The controller also shows the modulation and voltage applied to the generator's field .
- The information displayed by the controller will allow us to guide you, even at distance, for the adjustments, how to increase the efficiency and how to fix your lifting equipment.

INSTALLATION

For new installation see page 13 - 16

IMPORTANT NOTICE: The installation must be carried out by qualified personnel, voltages can reach 400 volts DC. Installation must be done by a professional. Be sure to follow the connection diagram correctly.

- 1- You must cancel the machine's automatic slow motion (Automatic idle) when the magnet is used. It is highly advisable to use double electrical plug to power the magnet.
- 2- Fix the controller to a solid surface without high vibration and far from the heating source.
- 3- Have the wires pass through the bottom of the controller in a way to prevent water break through.
- 4- Refer to the installation diagram to make wiring and double check if everything is connected correctly.
- 5- Do not close the generator's connection box because it is possible that F1 and F2 or F1 and F4 need to be reversed; it is better to do it in this box and also if you have coloured or numbered wires to respect.
- 6- Turn the ignition key to power up the controller without activating the generator. NOTE that the controller must stay activated during the start-up procedure to insure the good functioning of the controller. That is why it is connected to the ignition.
- 7- Now and every generator change, magnet size or generator RPM you will need to make the access code (0) to reset the adjustments. Pressing 2 sec. on the right arrow then the bottom arrow up (0) and once on the right arrow to accept.
- 8- Start the engine.
- 9- It is now time to program the system according to your system requirements; the genuine settings are for an electromagnet of 230 volts DC. Refer to page 8.
- 10- Adjust the throttle to the maximum to maintain a good hydraulic pressure. And to have a good generator RPM see generator nameplate. In the future the machine will still have to run at the speed or system has been adjusted if you use the magnet. See the dealer of the machine has this (manual throttle).
- 11- The first time you will have to press on the command or the upper arrow for 2 sec. to activate the functions. After a while without usage (TB V+ V- TIME), you will have to repeat this step. Press on the upper arrow and observe the activity on the screen: volts, amps, field volts and modulation (PWM).
- 12- This step must be done with a cold magnet to have a good reading of amperage for the auto-adjustment. Push on the command or the upper arrow to load and wait 'NEW SET UP' message to appear and then push on the lower arrow to drop the material. The controller adjusts automatically the magnetization (load) and the dropping (drop) by respecting the parameters voltage. He can change some parameters identify by an *. These parameters can be changed manually later on.
- 13- For best result he PWM should be between 600 and 800 @ 230 volt

- 14- If the PWM is too high, it means that the RPM is too low and if the PWM is too low the RPM is too high.

If you have the possibility to adjust the generator (RPM) EX. hydraulic system. You can activate the magnet and press and hold the right arrow to see full of (!) on the display. Now at the left you see the PWM/VOLT in memory and on the right current PWM/VOLT. Adjust the revolution to have about 750 PWM at right. At the end press once on the right arrow and the right information will be memorized. After a few seconds the controller will finish its adjustments, and you will be ready to work.

Controller properties

- **EDP-C2** is activated by 24 volts manual command instead of traditional 230 volts therefore making it safer for the operator. It has his own voltage control.
- If the wires of the electromagnet disconnect, the controller will automatically lower the voltage close to 0 volts DC to protect both the operator and the equipment.
- The controller will activate the electromagnetic field amperage only when needed to prevent premature wear of the generator.
- The controller may provide two dropping modes and two loading modes (refer to the next page)

Working with the controller

With only one command button: TB SW- MODE '0' (Toggle switch)

Turn the switch on and off to control the magnet.

With momentary switch see step 1 and 2

- 1- Press briefly on the command button for less than 0.5 sec and the controller will activate the electromagnet. If you hold the command button more than 0.5 sec the dropping sequence start at the release of the button.
- 2- To drop the materiel, hold the command button again for more than 0.5 sec.

With only one command button: TB SW- MODE '1' (Momentary switch)


- 1- Press briefly on the command button for less than 0.5 sec and the controller will activate the electromagnet.
- 2- Press again briefly and the dropping sequence will start instantly.
- 3- If you hold button during dropping cycle the (sorting) parameter are applied to make sorting.
- 4- If the sorting is too fast, hold down the button for 3 seconds at the time of powering up and the sorting speed will be divided by 2.
- 5- If you hold the button 2 sec. at the magnet loading the controller will activate the automatic reloading at the button release.
On activation the lamp will flash. And will flash one shot every 5 seconds to remind you that the reloading is still active. To unactivates it, hold the button 3sec. to glue, . at the magnet loading.

With two command button: TB SW- MODE '2' (Momentary switch)

- 1- Press briefly on the command button (less than 0.5 sec.) and the controller will activate the electromagnet.
- 2- Press a second command button to drop the materiel.
If you hold this button during dropping cycle the (sorting) parameter are applied.

This button will be connected to 'TB IN'.

To enable or disable TB IN enter access code 102.

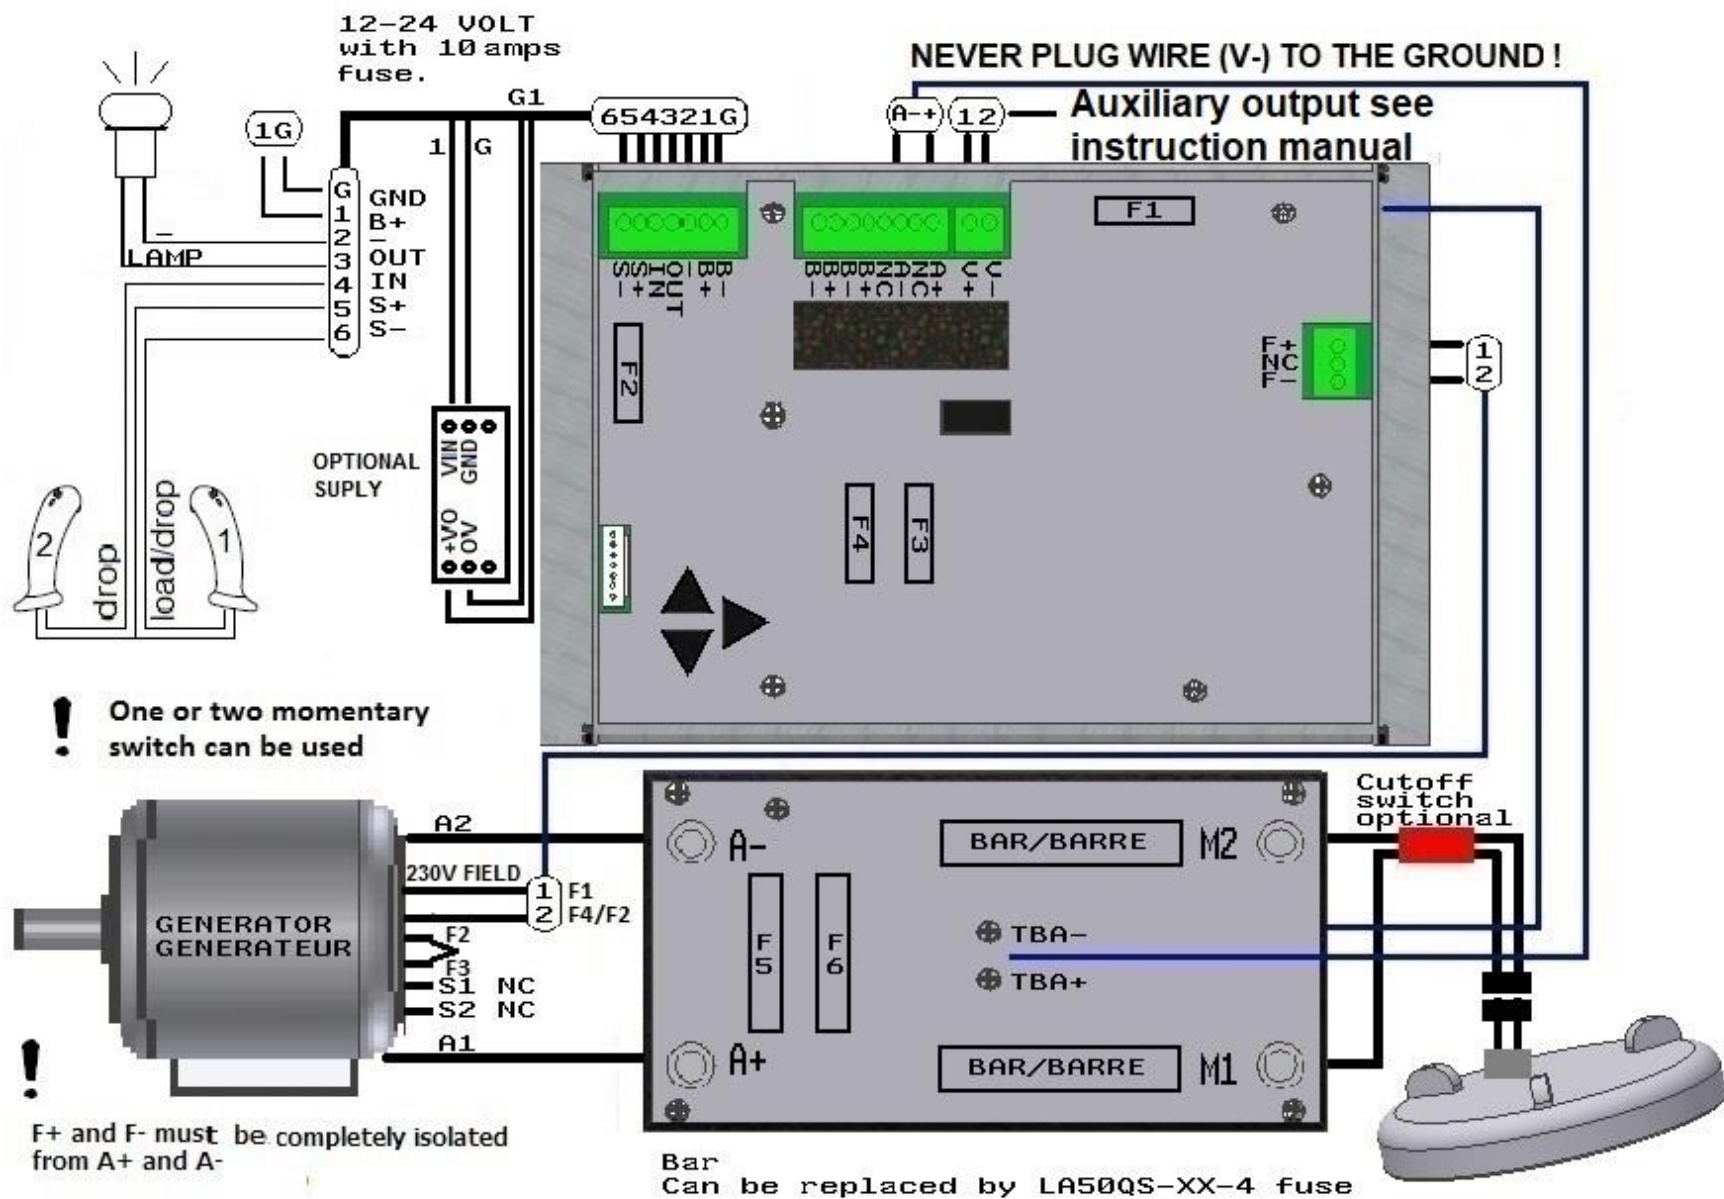

Programming of the parameters

Press the right arrow during 2 second. With the help of the two others arrows, select code '42' for the main parameters or the code '72' for the auxiliaries input and output.

- Press on the right arrow
- Use upward or downward arrows to scroll through the parameters.
- When you see the parameter that you would like to adjust press right arrow.
- Use the upward or downward arrows to change the value settings.
- Then, press on the right arrow; this will confirm the changes.
- To exit the programming mode, press on the downward arrows as many time as it takes to come back to the main menu.

Parameters description and original settings in parenthesis

If you come across this drawing  , it means that you can try some settings for the dropping before accepting them with the right arrow. **ACCES CODE 42**

- **LANGUAGE**
Language used on the screen (English)
- **MAGNET VOLTAGE**
Voltage to the electromagnet when lifting material
From 200 to 260 volts DC (230 volts)
- **GENERATOR AMP.**
Alarm amperage from 15 to 200 amps max . (200)
- **AUTO PARAMETERS FOR DROPPING**
The controller will apply, by itself, the best dropping parameters he can to accomplish the work efficiently.

- **START RAMP**

% to which dropping slows down from 1 to 70 % (10%) *

Change positively or negatively the numbers to obtain the best dropping as possible.



- **DROPPING**

Dropping from 0 to 30 (1%)*

Change positively or negatively the number to obtain the best dropping as possible.



HOLDS DROPPING SWITCH

These parameters are activated by holding the dropping command button during the dropping cycle

- **SORTING**

Dropping from 0 to 10 (5%)*

Hold dropping command to use this parameter.

Change positively or negatively the number to obtain the best dropping as possible to spread the material on the ground.



With maintained demagnetization you can extend the iron to better sorting it.

* These parameters will change with the auto-adjustment

INPUT/OUTPUT (CODE '72')

- 'TB SW-' MODE
 - Mode '0': First impulsion (-0.5 sec) active magnetization. A long impulsion (+ 0.5 sec) active the demagnetization. (Toggle switch)
 - Mode '1': Gives access to automatic magnet reloading at the release of sorting. (Momentary push switch)
 - Mode '2': A first impulsion (-0.5 sec) activates the magnetization and a second impulsion (-0.5 sec) active the demagnetization. (Momentary push switch)

THE ORIGINAL SETTING IS MODE (1)'

- 'TB VO'
 - hydraulic valve: output activates the hydraulic flow with a time of 1 to 60 minutes or infinite.
Do not use with an (optional supply).
 - Magnet selection uses this for magnet selection after complete magnet dropping cycle on multiple magnet system like spreader .Use with optional X BOARD .

THE ORIGINAL SETTING IS 10 MINUTE.

- TB IN
 - To enable or disable TB IN enter access code 102.

To put the parameters ready for new setup

Press for 2 second on the right arrow.

After, with the help of the other two arrows, select '0' and press one time on the right arrow.

Replacement fuse

FUSE NO.1	MDL 1 AMP 250 V
FUSE NO.2	AGC 4 AMP 250 V
FUSE NO.3	(FAST ACTING) MAX. 5 AMP 500V AC/CD CERAMIC
FUSE NO.4	(FAST ACTING) MAX. 5 AMP 500V AC/CD CERAMIC
FUSE NO.5	(FAST ACTING) MAX. 5 AMP 500V AC/CD CERAMIC
FUSE NO.6	(FAST ACTING) MAX. 5 AMP 500V AC/CD CERAMIC


WARNING: Do not replace ceramic fuses by glass fuses because the glass fuses could literally explode under that kind of voltage. And can cause a high voltage electric arc similar to static and affect electronic parts.

By doing so, it could be really dangerous for the eyes and the electric circuits.


ATTENTION

If the fuse F1 burned, the controller must be repaired, to save the extra cost. F3 to F6 fuses have to be changed in pairs 3 and 4 or 5 and 6 because the two have warmed.

GENERATEUR REVERSIBLE PAR LE CHAMP

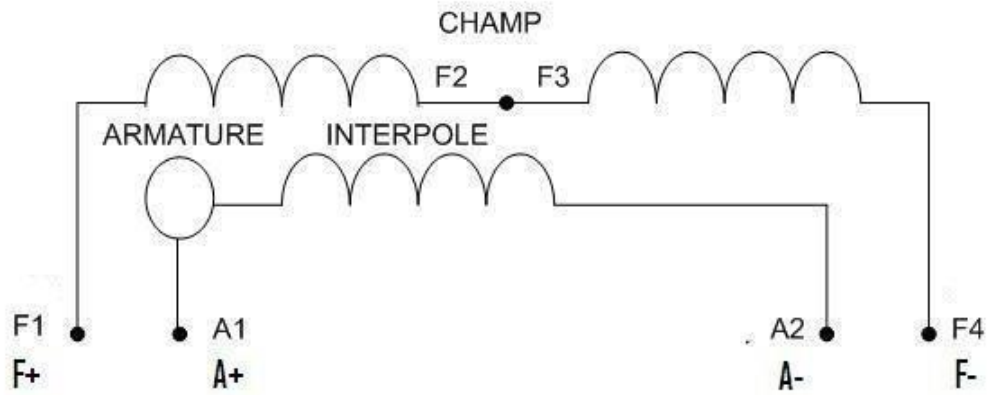

GENERATEUR DE TYPE (COMPOUND) OHIO GENERATOR

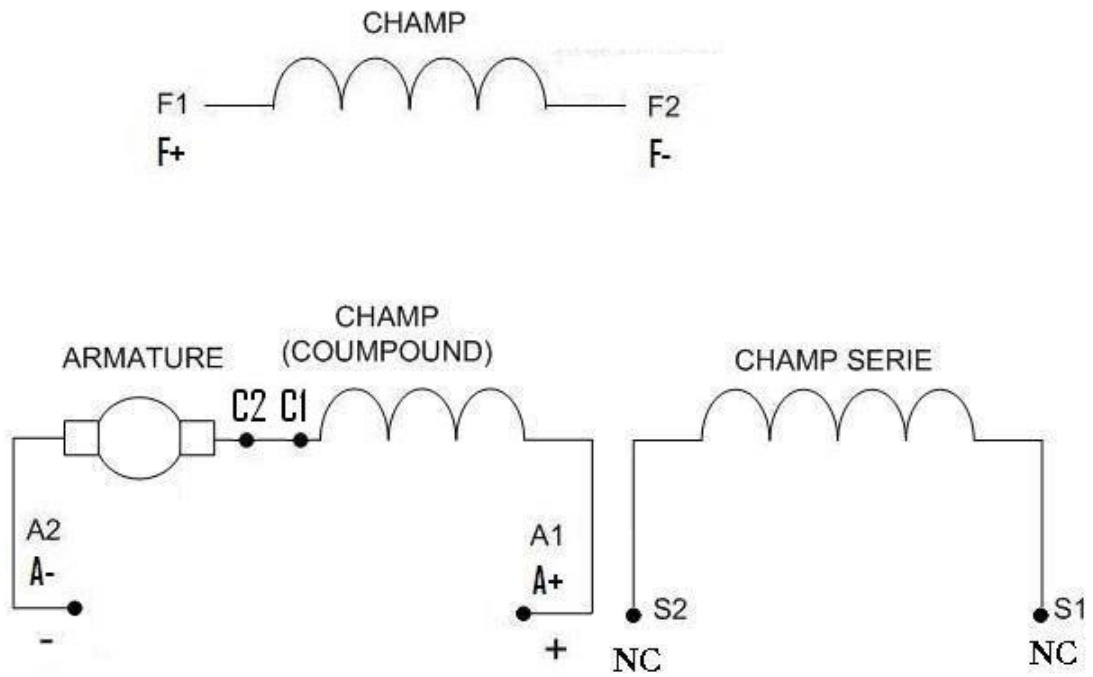

NOTICE C: 1

The power conductors must be of proper size to resist the load.

Use the following diagram for conductor size:

<u>AMP</u>	<u>AWG</u>	<u>IEC</u>
10 to 45	8	10mm
45 to 90	6	16mm
91 to 125	4	25mm

How to calculate the pulley size to reach the maximum power
The RPM must be 10% maximum faster than the generator specification

NEW INSTALLATION

- **For a generator of 1750 RPM : 180 to 230 volts DC field**

Diameter of the drive pulley divided by 1750 RPM multiplied by the MAXIMUM RPM of the engine equal the diameter of the generator's pulley.

$$D / 1750 \text{ RPM} \times \text{engine RPM}$$

- **For a generator of 2500 RPM : 230 volts DC field**

Diameter of the drive pulley divided by 2500 RPM multiplied by the MAXIMUM RPM of the engine equal the diameter of the generator's pulley.

$$D / 2500 \text{ RPM} \times \text{engine RPM}$$

- **For a generator of 3450 RPM : 180 to 230 volts DC field**

Diameter of the drive pulley divided by 3450 RPM multiplied by the MAXIMUM RPM of the engine equal the diameter of the generator's pulley.

$$D / 3450 \text{ RPM} \times \text{engine RPM}$$

EXISTING INSTALLATION

Note: **CHOOSE THE EASIEST PULLEY TO CHANGE**

- **Calculation of the drive pulley**

The RPM written on the generator's name plate multiplied by the diameter of the drive pulley.

- **Calculation of the generator's pulley**

The actual RPM divided by the RPM written on the generator's name plate multiplied by the diameter of the generator's pulley.

Note: **THE BELTS TO USE ARE OF TYPE ‘ C’**

GENERATOR’S POWER IN KW	NUMBER OF BELTS
10 à 15 KW	2
16 à 33 KW	3
34 à 40 KW	4

MEMORY ALARM DISPLAY

Up to 62 alarms can be memorized. Pressing and hold the lower arrow for 2 second will allows you to visualize all alarms memorized. Use the lower arrow again to visualize the oldest alarm and the highest arrow to visualize the most recent ones.

The first displayed is the most recent.

When you are done, close the menu by pressing on the right arrow.

The maximum of second value is 255 ex. Overload at 300 amps

The value = 255 amps.

Alarms description

The digital indicator will display the controller abnormalities only as a help indicator. However, it's important to verify the abnormalities indications to find the proper cause. List of possible abnormalities:

- | | | |
|--------------------|---|--|
| " NO LOAD " | - | Verify the magnet`s connections. |
| " OVER LOAD " | - | Verify for the magnet`s insulation. |
| " CT TROUBLE " | - | The current`s transformer is bad or disconnected.
Or short-circuit on magnet cable. |
| " RPM LOW " | - | The speed is too low : check for slippery straps or any mechanical problem. Check fuse 5,6,3,4 |
| " BRUSHES " | - | The brushes are to short or they don`t move freely in the brush holder. |
| " SHORT-CIRCUIT " | - | The wire could have been jammed or you may have conductive debris at the entrance of the magnet. |
| " SWAP TB A+,A- " | - | Swap TB A+ and TB A-. |
| " TIME OUT " | - | The magnet have been under voltage for too long and have reach the chosen parameter. |
| " HIGH VOLTAGE " | - | This message appears when a wire of the magnet as a bad connection or a faulty magnet.
- After this alarm, the power must be shut off for a requested 30 seconds. |
| " SWAP A+,A- " | - | Swap the connection on the fuse holder. |
| " OVERHEAT " | - | The inside temperature of the controller is too high. |
| " !!POWER LOSE !!" | - | Bad power or power failure (24V) or poor insulation of the magnet wire or magnet, it is important to find the trouble : FIX IMMEDIATLY. |
| "F-A NOT ISOLATED" | - | The field and armature winding seem not be good
Or electronic trouble. |

Very dangerous for the controller!!

TROUBLE SHOOTING

Problems frequently encountered:

Proper voltage is not reached or there is a bad magnetization - demagnetization

Cause

- Insufficient speed.
- Belt tension.
- Bad connections.
- The generator is too small.
- Faulty brushes.
Check for faulty fuses
F5,F6,F3,F4

The voltage won't go over 50volts

- Check for faulty brushes.
- Check for faulty fuses.

The voltage is good but there is a lack of amperage or the magnet doesn't lift enough material

- Bad connection.
- Check the resistance of the magnet.

The amperage is too high

- Check the resistance of the magnet.

The output voltage is unstable

- Check if the RPM is too fast.


The demagnetization is not constant

- Verify the brushes.
- Insufficient speed

The demagnetization doesn't occur

- Check the polarities.
When the magnet is activated, the letters 'V' and 'A' should be written in the same character size (capital or lowercase letters) at the same time of the 'F' on the screen.

SIGNAL INDICATORS AND DESCRIPTION

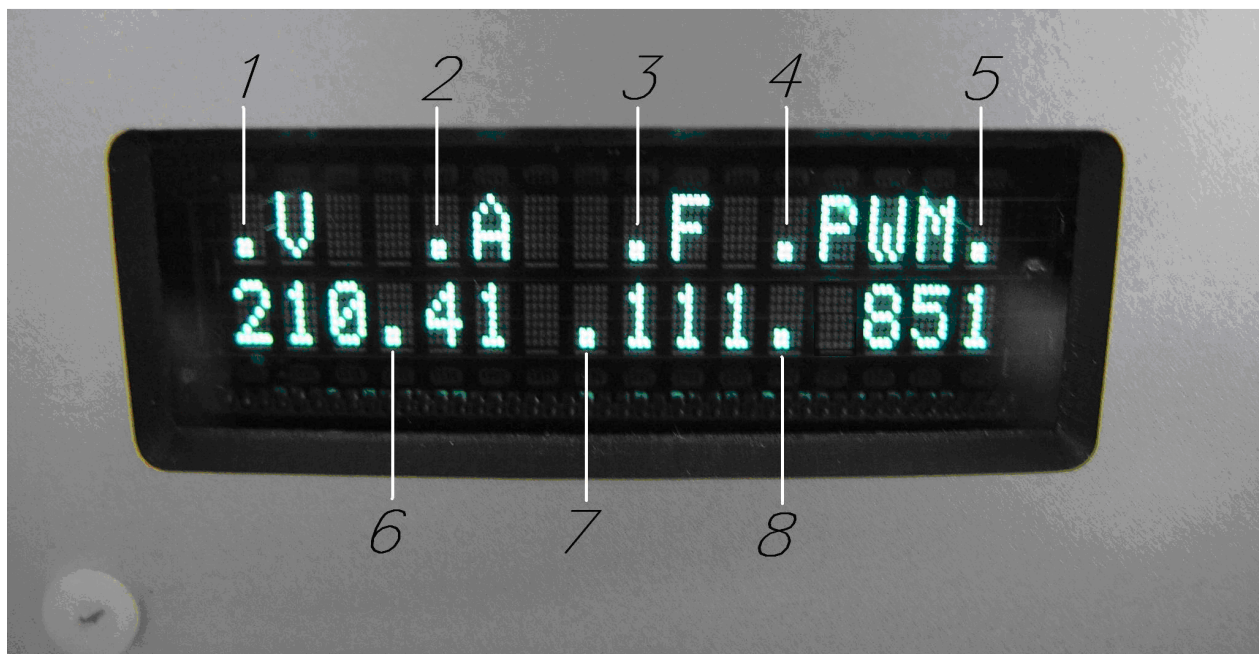

- 1- MANUAL COMMAND
- 2- IGBT POSITIVE
- 3- IGBT NEGATIVE
- 4- PWM ACTIVE
- 5- CYCLE
- 6- INPUT
- 7- V OUT
- 8- OUTPUT
- V- POSITIVE VOLTAGE ARMATURE
- v - NEGATIVE VOLTAGE ARMATURE
- A- POSITIVE AMPERAGE
- a - NEGATIVE AMPERAGE
- F - POSITIVE VOLTAGE OF THE FIELD
- f - NEGATIVE VOLTAGE OF THE FIELD



PRODUCT GUARANTEE

Products manufactured by EDP Conception (hereinafter the "**Manufacturer**") are guaranteed against defects in design, manufacturing, labour and materials for a period of two years from the date of purchase (hereinafter the "**Guarantee Period**"), but only in cases of normal and proper use of the product by the purchaser and if the conditions contained herein are met (hereinafter the "**Guarantee**"). Only products sold by an authorized distributor of the Manufacturer (hereinafter the "**Distributor**"), will be covered by this Guarantee.

The Guarantee is applicable only to the original purchaser of the product and is transferable to a subsequent purchaser only with the written consent of the Manufacturer.

All defective products giving rise to the application of the Guarantee will be replaced or repaired at the expense and at the sole discretion of the Manufacturer at a service center authorized by the Manufacturer (hereinafter the "**EDP Service Center**"). Replacement or repair parts provided by the Manufacturer will be equivalent, in terms of performance and reliability, to the original parts and will remain covered by the Guarantee for the Guarantee Period remaining on the day of pieces replacement.

The Manufacturer provides no guarantee with respect to losses or damages to the product which are attributable to misuse, improper installation of the product, accident, abuse, negligence, misconduct on the part of the purchaser, force majeure, excessive use, unauthorized modification, stress or unusual electrical interference, use in inappropriate environmental conditions, an accessory to the product or any other fault, damage or defect not covered under the terms of the Guarantee.

The Manufacturer is not liable for and provides no guarantee regarding any fault and/or damage arising directly or indirectly from delivery, transportation, removal, relocation, installation, maintenance or repair of the products or accessories thereto made by a Distributor or a service provider other than a EDP Service Center authorized by the Manufacturer. Moreover, all products' accessories are not covered by the Guarantee. The Manufacturer will not assume any responsibility for any damage caused by its products.

To qualify for the Guarantee, the purchaser must return the defective product to the Distributor where the purchase was made, or if it is not an EDP Services Center, in an EDP Service Center authorized by the Manufacturer.

The Manufacturer will not cover cost incurred for transportation or labour (other than the repair itself) during the execution of the Guarantee.

During the period of repair or replacement of the defective product covered by the Guarantee, the Manufacturer will not assume any liability arising directly or indirectly from any damages which may be suffered by the purchaser in connection with the product's unavailability, including any loss of income or enjoyment of the product.

Other than the Guarantee provided for herein, the Manufacturer shall not be liable for any guarantee offered by a third party, with the exception of, and without limiting the generality of the foregoing, any guarantee provided by the legislation in force in the province of Quebec.

The Guarantee offered covers only the repair, replacement or refund of the purchase price to the purchaser, the whole at the sole discretion of the Manufacturer.

The Guarantee will enter into force upon receipt by the Manufacturer a copy of this document duly completed, which must be returned within thirty (30) days from the date of purchase, accompanied by a copy of the purchase invoice, by mail, fax or email at:

Address : 2883, boul. Trudel-Est, C.P. 2035
St-Boniface (Québec) G0X 2L0
Canada

Facsimile : 819.535.6247

Email : info@edpconception.com

Note that the product's serial number is embedded on the right side of the display module.

Beneficiary : _____

Product's name : _____

Product's serial number : _____

Date of purchase (DD/MM/YYYY): ____ / ____ / _____

Signature : _____

If the purchaser fails to return the completed form along with a copy of the original purchase invoice, the Manufacturer will offer a Guarantee limited of two years from the date the product was sold by the Manufacturer to the Distributor (reseller).

Service instruction:

Call your EDP authorised dealer to receive a request for service (RS) number before shipping. Be sure to check your entire system before shipping your unit. Units received that are in good working condition will be returned with a service fee to cover inspection and return shipment.

Effective date: January 20, 2020.

EDP CONCEPTION
www.edpconception.com

Important notice :

Security warning

The controller is only a portion of the electro mechanic lifting system and electromagnet therefore precautions must be taken around the system by the user to insure the safety of all users and workers. In this type of system, if the controller fails, as a bad wire, a bad fuse, generator malfunction, etc., these circumstances may cause the load to suddenly drop and cause serious injuries and even death.

EDP CONCEPTION can not be responsible for these accidents.

NOTE A: 1

Important notice:

A voltage of 0 to 24 volts DC may be found at the output of the controller when the generator is running even if the manual command is not activated. This voltage is due to the residual magnetic memory in the generator.

PARAMETERS	POSSIBLES SETTINGS	DEFAULT SETTING					NOTE
CODE '42'	GENERAL						
LANGUAGE	English or French	English					
MAGNET VOLTAGE	180 to 260 V	230 V	Volt				
AMP. GENERATOR	15 to 200 Amps	200	Amps				
AUTO PARAMETER DROPPING	Active or Inactive	Active					
RAMP START	1 to 70%	10%					
DROPPING POWER	0 to 30 %	1 %					
SORTING	0 to 10 %	5 %					
CODE '72'	INPUT/OUTPUT						
" TB SW- " MODE	Mode 0,1, 2	Mode 2					
" TB VO " MODE OR TIME IN MINUTE	Selection,1 to 60 min, No limit	10 min	Minute				11 to 13 reserved

PARAMETERS	POSSIBLES SETTINGS	DEFAULT SETTING					NOTE
CODE ' TECHNICIAN X 2+102'	TECHNICIAN ONLY						
PWM 1'DROP	0 - 950	750	Pwm				
OFFSET TEMPERATURE	20 to 60	41	Degree				Dont change